


**ISTRUZIONI MONTAGGIO KIT FISSAGGIO
N-FORCE A MANIGLIONE CABINA
FIXING N-FORCE KIT TO CABIN HANDLE**

**CODICE
CODE**

100-2-70056

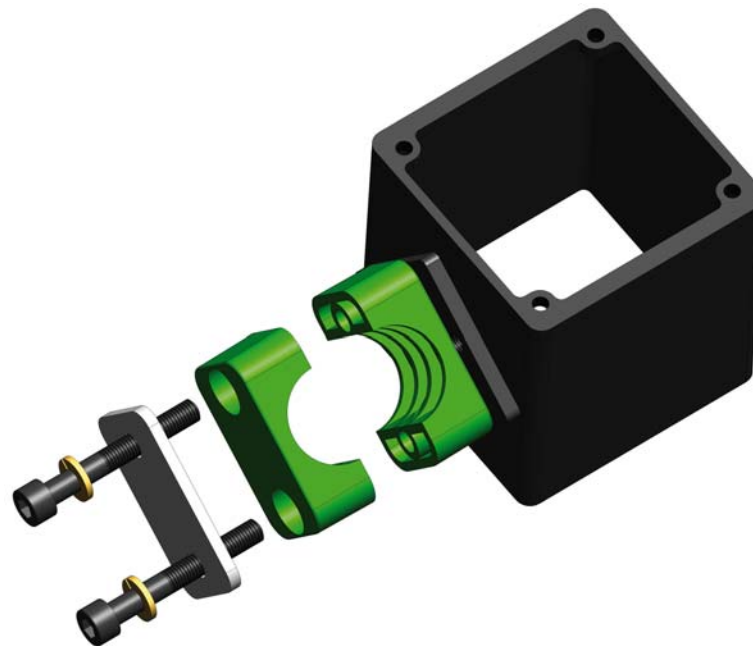

Rev: //

Codice foglio: 997-001-01551

Data: Giovedì 09 luglio 2009

OMFB
HYDRAULIC COMPONENTS®

pag.1

O.M.F.B. S.p.A. Hydraulic Components

We reserve the right to make any changes without notice.

Edition 2009.07 No reproduction, however partial, is permitted.

Via Cave, 7/9 25050 Provaglio d'Iseo (Brescia) Italy

Tel.: +39.030.9830611 Fax: +39.030.9839207-208

Internet: www.omfb.it e-mail: info@omfb.it